



AFTERCARE & SAFETY INSTRUCTIONS

Whilst the item has a high quality durable finish, it should nevertheless be treated with care. Surfaces should be cleaned only using a soft damp cloth, clean water and non-abrasive cleaning products. They should be dried using a soft lint free cloth.

NOTE: MAXIMUM SAFE EVENLY DISTRIBUTED WEIGHT ON GLASS SHELVES IS 3Kg PER SHELF. DO NOT strike glass components with hard or pointed items. DO NOT place very hot or very cold items against or in close proximity to glass surfaces. If the glass becomes chipped or broken replace immediately. For replacement glass and other components contact customer services at the address below.

10 YEAR GUARANTEE

We have complete confidence in this Laura Ashley product and as such it is offered with a 10-year guarantee against defects in manufacture. The guarantee requires that this product be used in the manner for which it was intended and that it is installed and maintained in accordance with the fitting instructions and local water bylaws. The guarantee covers products in domestic use only. In the unlikely event that this product should fail during the guarantee period we will either replace the faulty part or the complete unit as appropriate.

Customer Services

Laura Ashley Bathrooms, Brassmill Lane Trading Estate, Bath BA1 3JF

Tel: 01225 303 900 | Fax: 01225 448 877

Email: info@lauraashleybathroomcollection.com Web: www.lauraashleybathroomcollection.com

Manufactured by Roper Rhodes under license for Laura Ashley Ltd.

LAURA ASHLEY HOME

MARLBOROUGH MIRROR CABINET INSTALLATION & AFTERCARE INSTRUCTIONS



LA13050 (OAK)

RETAIN FOR FUTURE REFERENCE

MARLBOROUGH MIRROR CABINET (OAK)

INSTALLATION & AFTERCARE INSTRUCTIONS

INSTALLATION PROCEDURE

Caution: Before drilling check for hidden power cables and pipes. Take care using power tools, especially near water. The use of a residual current device (RCD) is recommended.

Remove the packaging taking special care with the door and glass shelves.

1) The glass shelves must be installed before the door. Insert the shelf lugs into the desired holes in the carcass and slot the shelves into the lugs, starting with the top shelf . (see fig 1) Tighten the lugs from underneath with a crosshead screwdriver. (see fig 2).

2) Depending on the intended location of the unit, you have the option of choosing whether you want a left or right hand opening door. Choose the desired handing and fix both hinges to the door as shown and to the carcass at points (C) and (D) (see fig 3). Do not completely tighten at this stage. You can then make the following adjustments as needed:

Up / Down adjustment: Loosen screws (C) and (D) to adjust the vertical position of door. Re-tighten once desired position is achieved.

Forward / Backward Adjustment: Loosen screw (A) and adjust the hinge left or right in the carcass. Retighten screw (A) once the door is in the desired position.

Left / Right Adjustment : Loosen or tighten screw (B) to adjust the door position left or right.

4) In the desired location in the bathroom mark of the holes for the mounting plates. Using a spirit level mark off a horizontal line approximately 50mm below where the top of the cabinet is to be. Position the plate hole centres so that they are centred on the line and ensure the ends of the plates are spaced to the width between the inner edges of the back side of the cabinet (see fig 4). Mark off the holes using a pencil.

5) Drill the required holes and insert the wall plugs. Note: Wall plugs supplied are suitable only for solid stone/brick walls. For plasterboard walls use specialist wall plugs, available from DIY or hardware stores. Seek advice from a specialist about the suitability of fixings to be used.

6) Screw the wall plates to the wall using the screws provided, please ensure the screws are fully tight but take care not to overtighten. Two screws must be used in each plate (see fig 5).

7) Now hang the cabinet on the mounting plates, the claws on the cabinet brackets must be securely located on the plates. Remove the plastic screw cover caps from the internal back face of the cabinet . Using a spirit level adjust the angle of the cabinet by turning the bottom screw with a cross head screwdriver. When the angle is properly adjusted it is necessary to secure the cabinet to the wall by tightening the top screw, the cabinet should not be left unattended until it is fully secure. Replace the plastic screw cover caps.

Instructions continued overleaf.

LAURA ASHLEY
HOME

