


LAURA ASHLEY HOME


LANGHAM TALLBOY

INSTALLATION & AFTERCARE INSTRUCTIONS

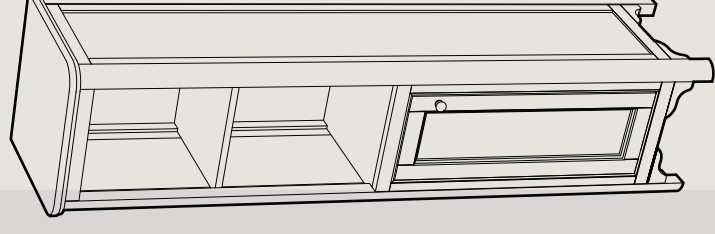

LA13023

RETAIN FOR FUTURE REFERENCE

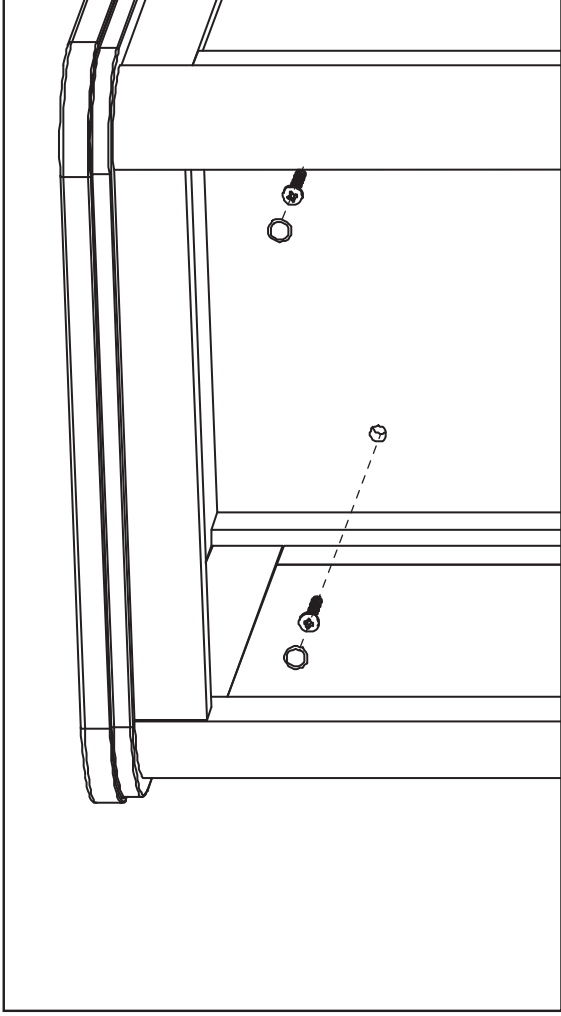

AFTERCARE INSTRUCTIONS

Whilst the item has a high quality durable finish, it should nevertheless be treated with care. Surfaces should be cleaned only using a soft damp cloth and clean water and dried using a soft cotton cloth.

Bath cleaning products, even non scratch ones could damage the finished surface.

10 YEAR GUARANTEE

We have complete confidence in this Laura Ashley product and as such it is offered with a 10-year guarantee against defects in manufacture. The guarantee requires that this product be used in the manner for which it was intended and that it is installed and maintained in accordance with the fitting instructions and local water bylaws. The guarantee covers products in domestic use only. In the unlikely event that this product should fail during the guarantee period we will either replace the faulty part or the complete unit as appropriate.

Customer Services

Laura Ashley Bathrooms, Brassmill Lane Trading Estate, Bath BA1 3JF
Tel: 01225 303 900 | Fax: 01225 448 877

Email: info@lauraashleybathroomcollection.com Web: www.lauraashleybathroomcollection.com

Manufactured by Roper Rhodes under license for Laura Ashley Ltd.

INSTALLATION PROCEDURE

Depending on the intended location of the unit, you have the option of choosing whether you want a left or right hand opening door.

1) Choose the desired handing and fix both hinges to the door as shown and to the carcass at points marked (A) . Do not completely tighten at this stage

2) A number of adjustments can then be made to adjust the position of the doors to ensure smooth operation:

Up / Down adjustment: Loosen screws (A) to adjust the vertical position of door. Re-tighten screw once desired position is achieved.

Forward / Backward Adjustment:

Loosen or tighten screw (B) to adjust door position in or out.

Left / Right Adjustment : Loosen screw (C) and adjust the door position left or right. Re-tighten screw once desired position is achieved.

3) It is strongly advised that the tallboy is secured to a wall using the fixing pack provided. Place the tallboy against the wall in the desired position. Note the two holes near the top of the inner back panel. Accurately mark the position of the holes on the wall using a pencil. Move the tallboy to gain access to the wall. Drill and fit the wall plugs.

NOTE: The wall plugs supplied are only suitable for solid stone / brick walls. For plasterboard walls use specialist wall plugs.

5) Reposition the tallboy so the holes in the back panel line up with the wall plugs. Insert the wall screws supplied through the back panel into the wall plugs and tighten so the tallboy is secure. Cover the screwheads with the plastic cover caps provided. (see picture overleaf).

