


# BACK-TO-WALL UNIT

## FITTING INSTRUCTIONS

Please retain for future reference

### Important Installation Notes

\*It is essential that any surfaces of the unit which are cut during installation are re-sealed using an appropriate waterproof sealant, varnish or oil based paint. Failure to re-seal cut surfaces will invalidate the product warranty and may result in water damage.

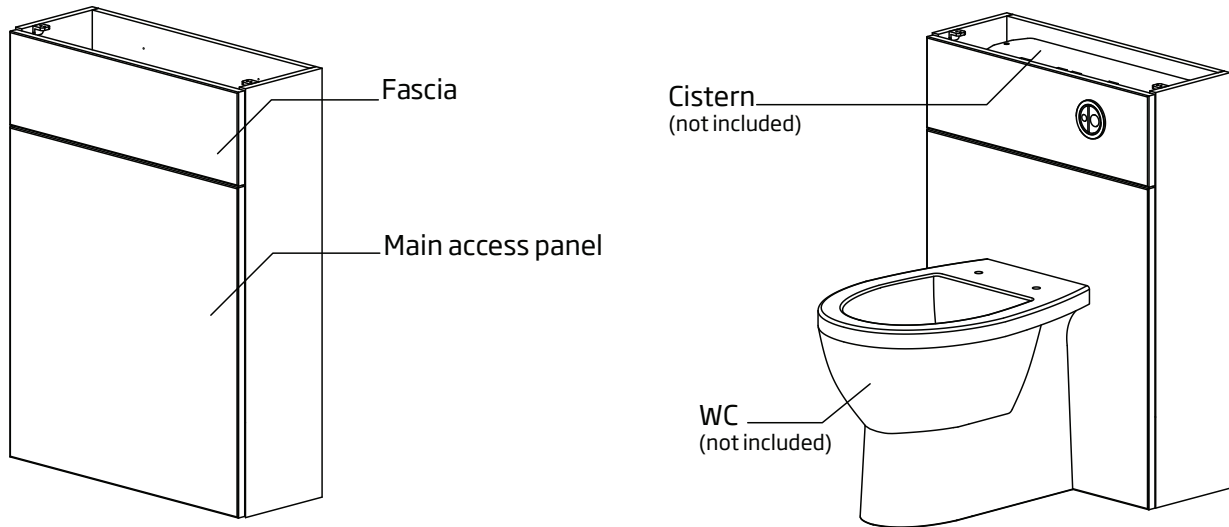

### Installing WC


Please note that these instructions are a guide only and may not be appropriate for all installations. Fit WC / Bidet according to manufacturer's instructions.

The main access panel and fascia are designed to be fitted / removed after the WC / bidet is installed.

A normal installation of a WC would be as follows:

1. Remove fascia by gently pulling it.
2. Remove main access panel by simply sliding upwards.
3. Fit base unit to wall in required location ensuring correct position of supply and waste pipes.
4. Fit WC and cistern according to manufacturer's instructions - check system carefully for leaks.
5. Cut a suitable slot in the main access panel to allow for the soil pipe. Note: Cut this slot as wide as possible to make refitting the main access panel easier. The cut surfaces should then be sealed with an appropriate waterproof sealant. Refit the panel by sliding it back into position. Silicone the join between WC and access panel.
6. Re-fit fascia.
7. Drill suitably positioned / diameter hole in the fascia for the cistern operating button and install according to manufacturer's guidelines.
8. Fit worktop - See below diagram and note.

Note: When fitting worktop to Back to Wall unit on its own, the worktop's overhang should be equal on left and right of unit. When assembling in a run, the worktop requires no overhang on side of semi-countertop unit, and a full overhang on the opposite side. Worktop does not need cutting down to fit.

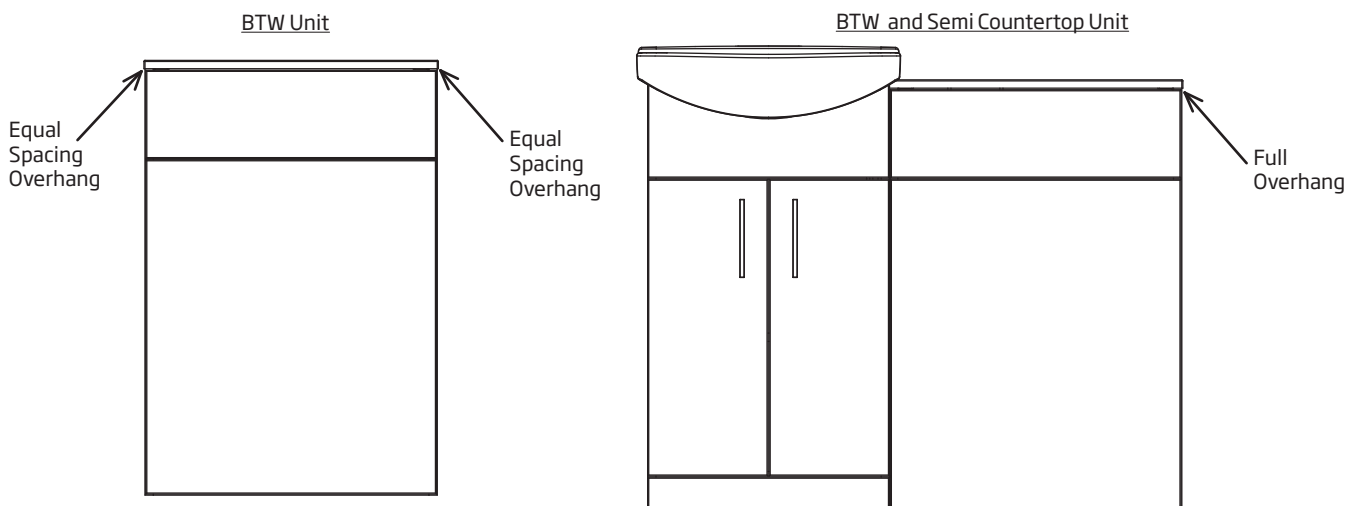

# BACK-TO-WALL UNIT

## FITTING INSTRUCTIONS

Please retain for future reference

### Furniture Aftercare Instructions

As with all wooden furniture, this product should be treated with care.

We recommend...	Please DO NOT...
<p>Wipe away any water splashes or condensation after use. Excessive exposure to water will deteriorate the furniture.</p> <p>All bathrooms should be well ventilated with a suitable extractor fan.</p> <p>Clean with a soft damp cloth only.</p> <p>Use a wax free polish if one must be used.</p> <p>For removal of lime scale deposits use a suitable proprietary cleaner. If necessary test on an inconspicuous area first.</p>	<p>Do not scrub or scour</p> <p>Do not use abrasive cleaning agents</p>

### Replacement components

Should you require any replacement components for this product please contact using the contact details below.