

# SKETCH SOFT CLOSE TOILET SEAT


## FITTING INSTRUCTIONS

Please retain for future reference


R2

SKSCTS

Please read carefully before attempting to fit the seat. If you are not the end user, please make sure the aftercare instructions are made available for the end user to read.

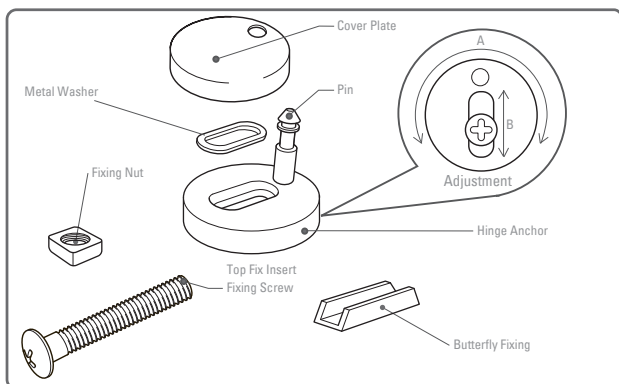


Maximum adjustment of the pin position is achieved by rotating the hinge anchor around the screw (adjustment A in the parts diagram above). Further fine adjustment of the pin position can be achieved by sliding the screw in the adjustment plate (adjustment B).

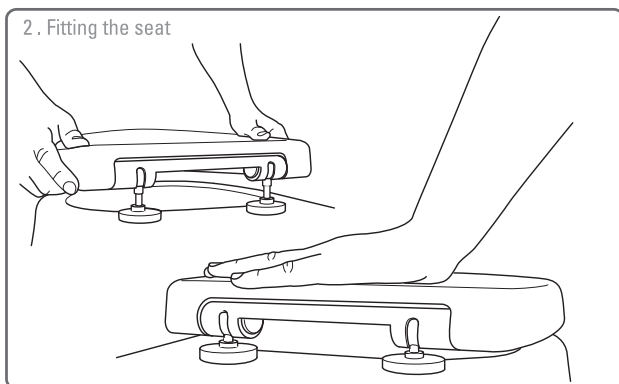


Align and insert the hinge anchors into the hinges on the seat and firmly press down until you hear them click into position. Adjust the hinge anchors to make sure the seat lines up with the edges of the toilet pan. When you are satisfied the seat is in the correct position, remove the seat from the hinge anchors (see step 3) and fully tighten the screw in the top fix insert (shown in step 1). Place the cover plates over the hinge anchors. Replace the seat and 'click' into position.

### 1. Fixing the hinge anchor

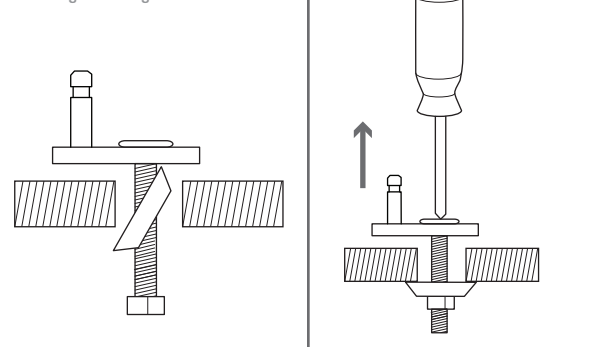

Assemble the components as shown, and push the butterfly fixing, fixing nut and fixing screw through the seat fixing holes in the pan. Pull up slightly on the base of the hinge anchor to engage the butterfly clip on the underside of the pan and tighten with a screwdriver to secure the hinge anchor into place.

### 3. Quick release mechanism

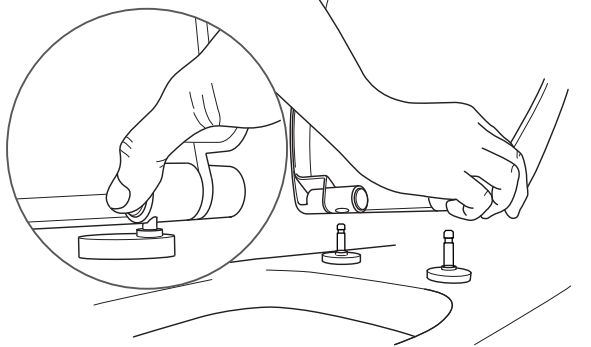

This toilet seat is designed for quick and easy removal when cleaning the toilet pan. To activate the quick release lift the lid and seat up. Press the buttons one by one and lift the seat up. To replace the seat align the sockets with the pins and firmly press down until you hear them click into position.

## AFTERCARE INSTRUCTIONS



Clean surfaces with a soft damp cloth and mild soap solution



Do not scrub or scour



Do not use abrasive cleaning agents



Do not stand on the lid or ring of your toilet seat

## IMPORTANT

After a few days check that the fixings are still tight. This is necessary as components will compress during the first few days.

When using abrasive, corrosive or chlorine-based cleaners for the toilet bowl, ensure that these do not come into contact with the seat. Also keep the seat and cover in an upright position until all cleaner has been flushed away. Failure to do so can lead to discolouration of surfaces or rusting of metal parts which will not be covered by the guarantee.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary. Please take care when handling or moving the toilet seat as careless handling may cause damage or injury. The toilet seat can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrect product installation or assembly.